 


Bohrstar 54 KIT


Rhombic insert 

Ø 6 - 210

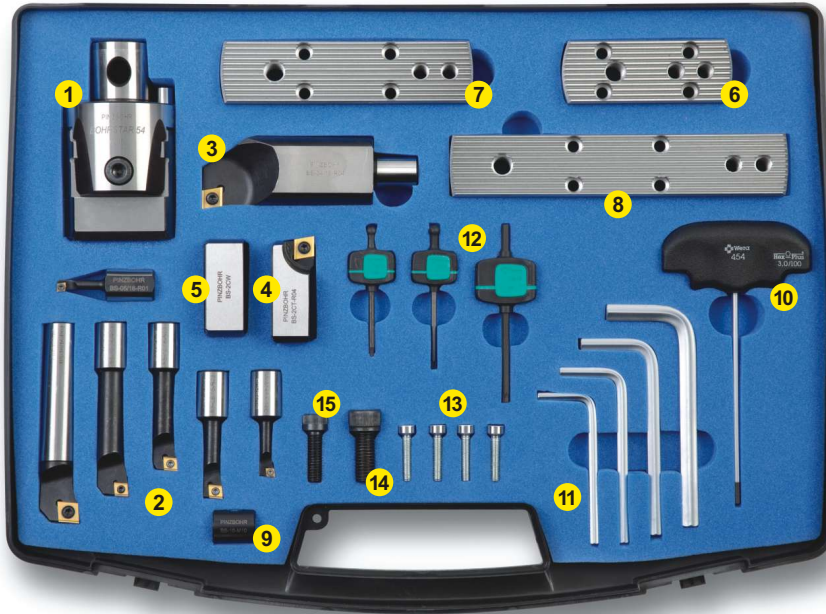

ORDERING NUMBER:
BS 54 KIT R 6-210


Description	Product Number	Qty.	Description	Product Number	Qty.
1 Bohrstar head	BS 054 16	1	9 Location sleeve	BS 16 M10	1
2 Boring bar 5 mm.	BS 05 16 R01	1	10 Adjusting key	AK 03	1
3 Boring bar 6 mm.	BS 06 16 R01	1	11 Hexagonal key 4	HK 040	1
4 Boring bar 8 mm.	BS 08 16 R03	1	12 Hexagonal key 5	HK 050	1
5 Boring bar 10 mm.	BS 10 16 R03	1	13 Hexagonal key 6	HK 060	1
6 Boring bar 12 mm.	BS 12 16 R03	1	14 Hexagonal key 8	HK 080	1
7 Boring bar 16 mm.	BS 16 16 R04	1	15 Torx key 6	TK 06	1
8 Boring bar 34 mm.	BS 34 16 R04	1	16 Torx key 8	TK 08	1
9 Cartridge	BS 2CT R04	1	17 Torx key 15	TK 15	1
10 Counterweight	BS 2CW	1	18 Plate fixing screws	D 027 21	4
11 Small plate	BS SP 085 130	1	19 Cartridge screw	CS 10 25	1
12 Medium plate	BS SP 125 170	1	20 Counterweight screw	CS 08 25	1
13 Large plate	BS SP 165 210	1			

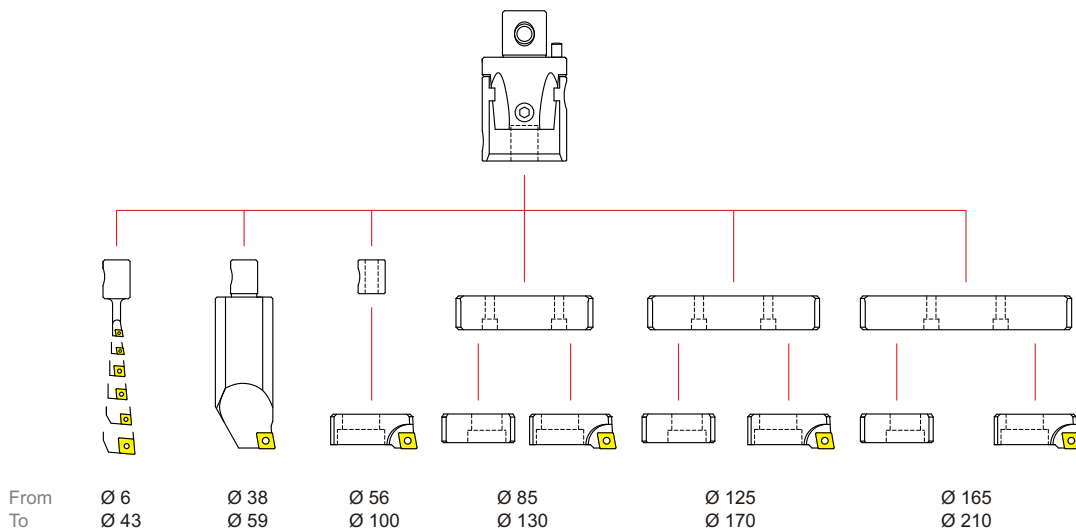 

Bohrstar 54 KIT

Rhombic insert 

 Ø 8 - 210

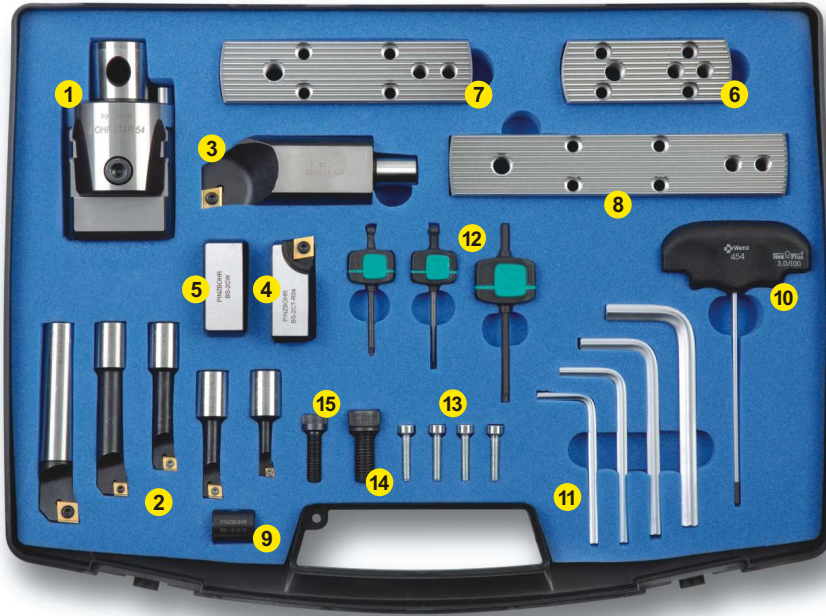

ORDERING NUMBER:
BS 54 KIT R 8-210

Description	Product Number	Qty.	Description	Product Number	Qty.
1 Bohrstar head	BS 054 16	1	9 Location sleeve	BS 16 M10	1
2 Boring bar 6 mm.	BS 06 16 R01	1	10 Adjusting key	AK 03	1
3 Boring bar 8 mm.	BS 08 16 R03	1	11 Hexagonal key 4	HK 040	1
4 Boring bar 10 mm.	BS 10 16 R03	1	12 Hexagonal key 5	HK 050	1
5 Boring bar 12 mm.	BS 12 16 R03	1	13 Hexagonal key 6	HK 060	1
6 Boring bar 16 mm.	BS 16 16 R04	1	14 Hexagonal key 8	HK 080	1
7 Boring bar 34 mm.	BS 34 16 R04	1	15 Torx key 6	TK 06	1
8 Cartridge	BS 2CT R04	1	16 Torx key 8	TK 08	1
9 Counterweight	BS 2CW	1	17 Torx key 15	TK 15	1
10 Small plate	BS SP 085 130	1	18 Plate fixing screws	D 027 21	4
11 Medium plate	BS SP 125 170	1	19 Cartridge screw	CS 10 25	1
12 Large plate	BS SP 165 210	1	20 Counterweight screw	CS 08 25	1

